



Cleaning Guide: Wood Wool

Dirt, Dust, and Debris

First, attempt to brush off dirt, dust, or debris with a soft-bristle brush or blow gently with compressed air. If unresolved, use a vacuum with a soft bristle attachment, being careful not to apply excessive pressure to the face of the material to avoid damage.

Stains

For light stains, use a white cloth or sponge damp with warm water to blot up the stain. Heavy stains or soiling may require a mild detergent and water solution. Test first on a small (or hidden, if possible) area of the product. Allow test area to dry completely and look for any discoloration before using on the rest of the product. Once the stain is removed, use a dry cloth to remove excess moisture and allow the material to air dry. Do not use heat to assist drying.

Chipping or Abrasions

If chipping or deep abrasions occur on painted panels, MATERIAL LOGIQ recommended touch up paint should be used to restore the color using a brush or long-haired paint roller. Please follow the instructions specific to the paint when applying.